

KEY TO WIRING DIAGRAM

No.	Description	No.	Description
1.	Dynamo.	30.	R.H. rear flasher lamp.
2.	Control box.	31.	L.H. rear flasher lamp.
3.	12-volt battery.	32.	Heater switch
4.	Starter solenoid.	33.	Heater motor
5.	Starter motor.		} when fitted.
6.	Lighting switch.	34.	Fuel gauge.
7.	Headlamp dip switch.	35.	Fuel gauge tank unit.
8.	R.H. headlamp.	36.	Windscreen wiper switch.
9.	L.H. headlamp.	37.	Windscreen wiper motor.
10.	Main-beam warning lamp.	38.	Ignition/starter switch.
11.	R.H. sidelamp (in headlamp or flasher) lamp.	39.	Ignition coil.
12.	L.H. sidelamp (in headlamp or flasher) lamp.	40.	Distributor.
14.	Panel lamps.	41.	Fuel pump.
15.	Number-plate lamp (two for Countryman and Traveller).	42.	Oil pressure switch.
16.	R.H. stop and tail lamp.	43.	Oil pressure warning lamp.
17.	L.H. stop and tail lamp.	44.	Ignition warning lamp.
18.	Stop lamp switch.	45.	Speedometer.
19.	Fuse unit; 1-2, 35 amp.; 3-4, 35 amp.	46.	Temperature gauge.
20.	Interior light.	47.	Temperature gauge transmitter.
21.	R.H. door switch.	64.	Bi-metal instrument voltage stabilizer.
22.	L.H. door switch.	67.	Line fuse, 35 amp.
23.	Horn.	75.	Automatic gearbox safety switch (when fitted).
24.	Horn-push.	83.	Induction heater and thermostat (when fitted).
25.	Flasher unit.	84.	Suction chamber heater (when fitted).
26.	Direction indicator and headlamp flasher switch.	94.	Oil filter switch.
27.	Direction indicator warning lamp.	105.	Oil filter warning lamp.
28.	R.H. front flasher lamp.		} Not fitted on Automatic.
29.	L.H. front flasher lamp.	115.	Rear window demister switch (when fitted).
		116.	Rear window demister unit (when fitted).
		150.	Rear window demister warning light (when fitted).

CABLE COLOUR CODE

B. Black.	G. Green.	W. White.
U. Blue.	P. Purple.	Y. Yellow.
N. Brown.	R. Red.	L.G. Light Green.

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.